

The button sticks:

Pull the trigger and it will reset.

SUMO doesn't fold:

If the tubes are hard to pull apart, check you have the stick in reacher mode.

SUMO is unstable and wobbles:

Check that the slots in the tubes are lined up. This will ensure that the claw and handle are lined up, which will in turn make the SUMO stable.

Claw will not close in walking stick mode:

Return the SUMO to reacher mode. (See page 5).

1. Pull the trigger five times to reset the internal mechanism, and then put the SUMO back into walker mode.
2. If problem persists, using half or one click turn adjustments to avoid over tightening; turn the screw on the claw clockwise to tighten the cord. Note: if you over-tighten, the claw will not work and damage may result.